



Done

- ☐ 1. Check the packaging for transport damage.
- ☐ 2. Unpack the spring compressor and all supplied accessories.
- ☐ 3. Check the spring compressor and all accessories for transport damage.
- ☐ 4. Check that the spring compressor is complete:

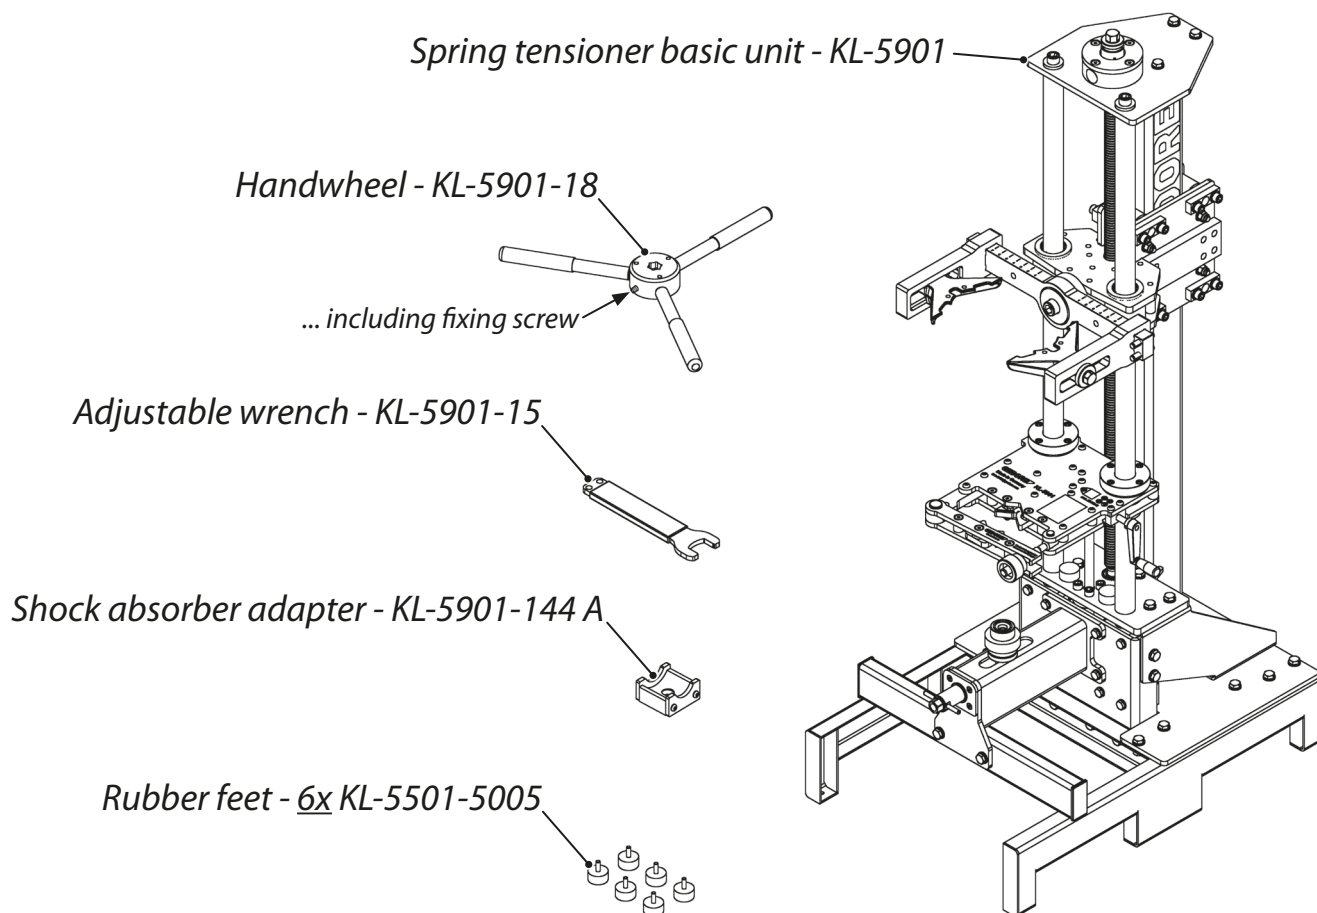


- ☐ 5. Place the handwheel on top of the spring tensioner and secure it with the fixing screw.

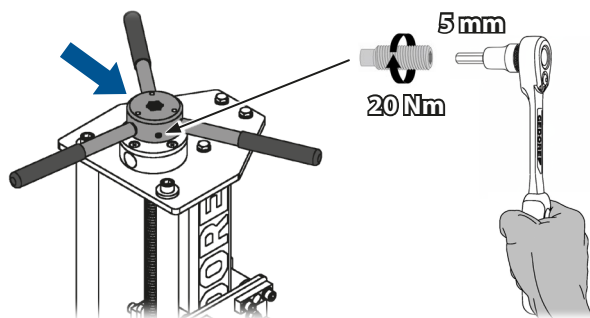





Done

- ☐ 6. Screw the rubber feet (6 pieces) completely into the bottom of the spring tensioner.

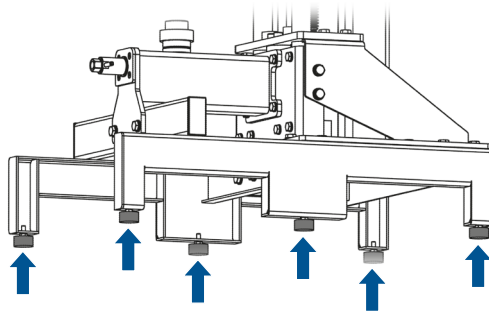


- ☐ 7. Check all parts for dirt and clean with a microfiber cloth if necessary.

- ☐ 8. Check all moving parts on the spring compressor to ensure they move freely.

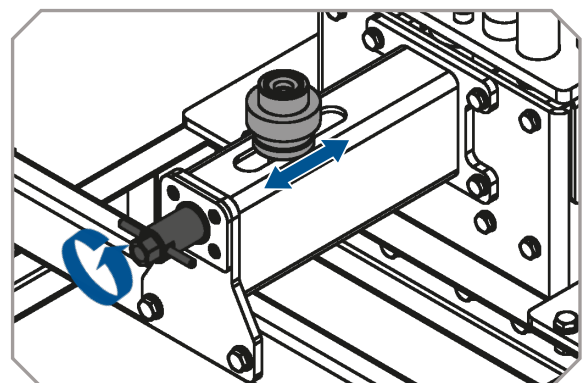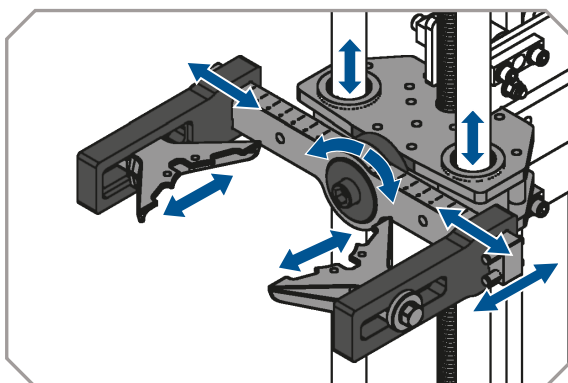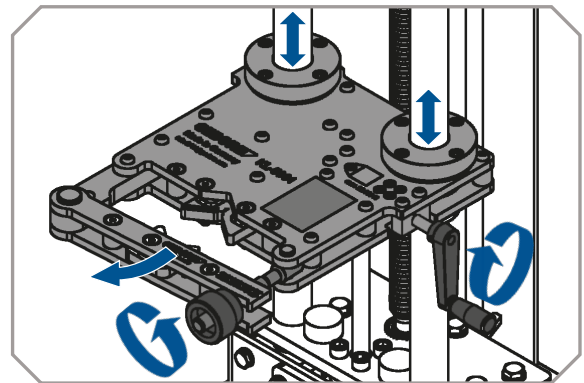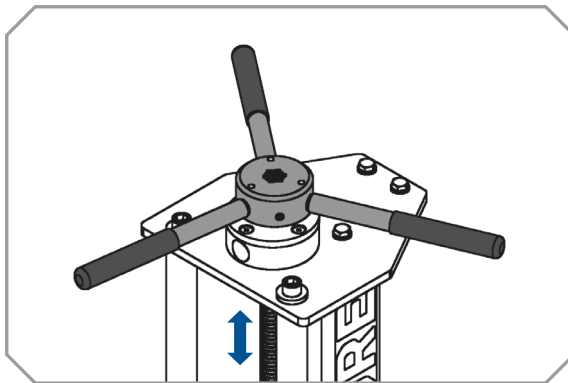

- ☐ 9. Before initial use, scan the QR code-and read the operating instructions!

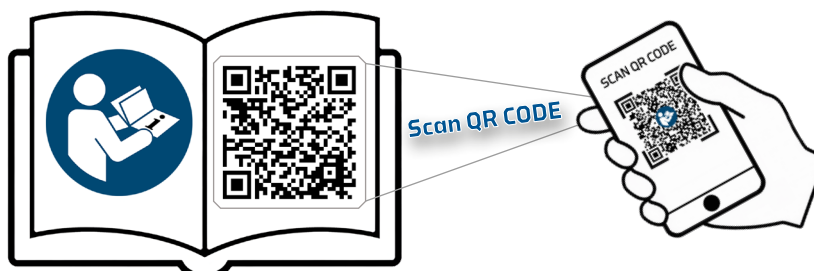

If you have any questions,
please contact:
service@gedoretools.com