


KL-0112-9 /-90 /-91

Set of Sockets for Brakes

**GEDORE Automotive GmbH**

Breslauer Straße 41
78166 - Donaueschingen
Postfach 1329
78154 Donaueschingen - GERMANY
☎ +49 (0) 771 / 8 32 23-0
☎ +49 (0) 771 / 8 32 23-90
✉ info.gam@gedore.com

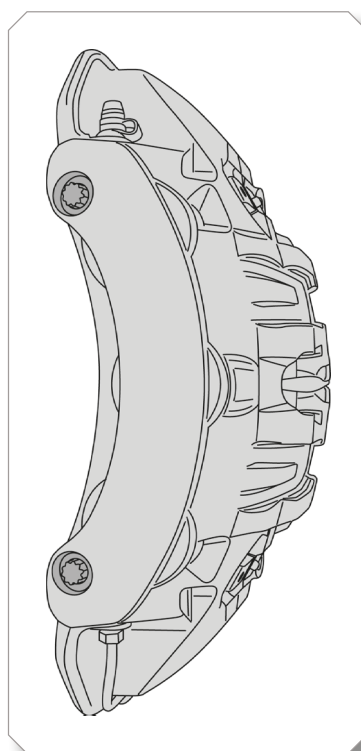

www.gedore-automotive.com



10/2024

0112-9_Serie_EN241020.indd

Product description

KL-0112-9 - Set of sockets for brakes, 5 parts

Fits brake calliper retaining bolts on standard Audi, Porsche, and Mercedes models.

KL-0112-901 = Audi, Porsche, Mercedes

KL-0112-902 = Audi S5


KL-0112-911 = Audi Q7

KL-0112-912 = Audi S8, Q7; Porsche Macan, Cayenne, Cayman

KL-0112-913 = Audi S6, A8; Porsche Cayenne

Recommended accessories:

1993 U-20 - Reversible ratchet, 1/2"

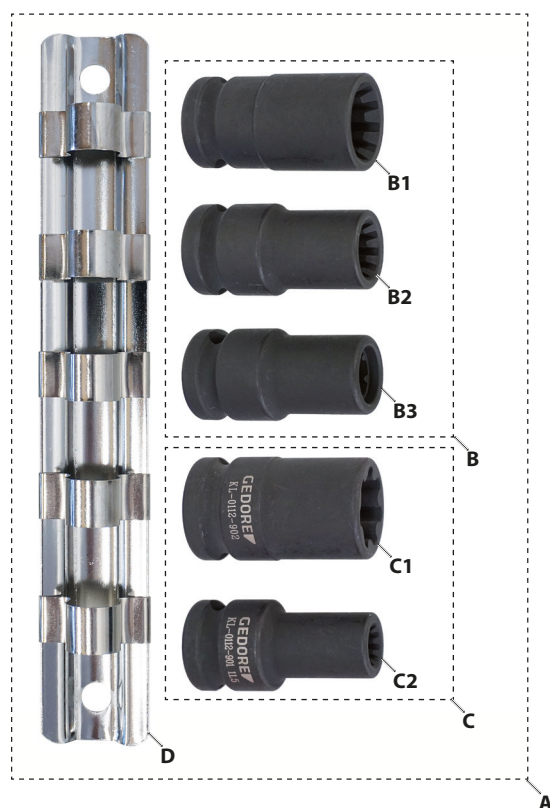

Scope of supply/Single parts overview

Item	Part no.	Description	Qty.
A	KL-0112-9	Set of sockets for brakes, 5 parts	1
B	KL-0112-91	Set of sockets, brakes	1
B1	KL-0112-913	Socket, 20mm (special profile)	1
B2	KL-0112-912	Socket, 15mm (special profile)	1
B3	KL-0112-911	Socket, 14mm (special profile)	1
C	KL-0112-90	Set of sockets for brakes	1
C1	KL-0112-902	Socket, 22mm (special profile)	1
C2	KL-0112-901	Socket, 11mm (special profile)	1
D	KL-0112-9/97	Spring steel socket rail	1

Specifications

Height:.....50mm

Drive: 1/2"

Width across flats (KL-0112-901):.....11mm

Number of teeth / profile (KL-0112-901):..... 10

Width across flats (KL-0112-902):.....22mm

Number of teeth / profile (KL-0112-902):..... 7

Width across flats (KL-0112-911):.....14mm

Number of teeth / profile (KL-0112-911):..... 7

Width across flats (KL-0112-912):.....15mm

Number of teeth / profile (KL-0112-912):..... 10

Width across flats (KL-0112-913):.....20mm

Number of teeth / profile (KL-0112-913):..... 10

⚠ Safety instructions and regulations

➤ **Before using** the special tools, read and understand all safety instructions and **follow** them for **safe use**!

➤ Use the special tools **as intended**, and **always** perform maintenance tasks and repairs in compliance with the regulations on occupational safety and accident prevention and with the instructions by the vehicle manufacturer!

➤ **Prior to each use**, check the special tools **carefully** for damage, loose parts or unauthorised modifications. **Never** use it if you notice any such deficiencies!

➤ **Always** wear your personal protective equipment (for example safety goggles, protective gloves, safety shoes) when working!