

KL-0326-170

Suspension Joint Release Tool Kit



GEDORE Automotive GmbH

Breslauer Straße 41
78166 - Donaueschingen
Postfach 1329
78154 Donaueschingen - GERMANY
☎ +49 (0) 771 / 8 32 23-0
☎ +49 (0) 771 / 8 32 23-90
✉ info.gam@gedore.com



www.gedore-automotive.com



01/2026


KL-0326-170__EN260111.indd

Product description

KL-0326-170 - Suspension joint release tool kit

Suitable for suspension joint bolts on multi-link axles, for example, Mercedes C-Class (W205), E-Class (W213), EQC (N293), GLC (X253), and many others.

For professional loosening and tightening with simultaneous counter-holding of the suspension joint screw connections on the upper and lower axle control arms. By inserting the special inlay ring (24mm (waf)) into the socket spanner (32mm (waf)) as well as the interchangeable screwdriver bits (T45 + T50), the release tool kit can be individually adapted to the suspension joint screw connections. Required, for example, when replacing axle control arms, suspension springs, or shock absorbers.

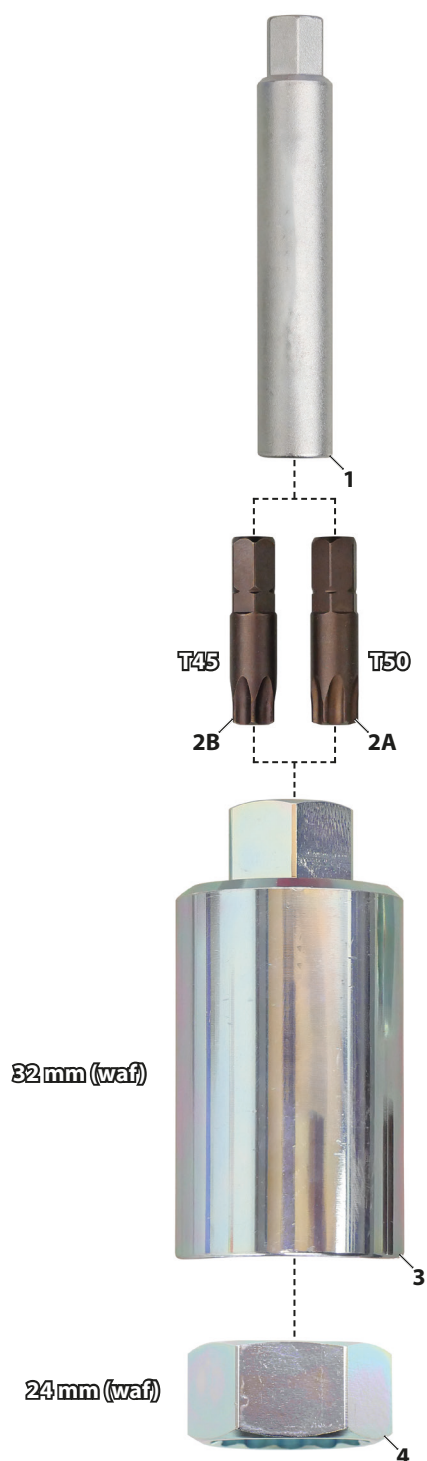

Scope of supply/Single parts overview

Item	Part no.	Description	Qty.
1	KL-0056-1131	Holder for screwdriver bit	1
2A	887 TX T50	Screwdriver bit T50	1
2B	887 TX T45	Screwdriver bit T45	1
3	KL-0326-1701	Socket spanner 32mm (waf)	1
4	KL-0326-1702	Inlay ring 32mm to 24mm (waf)	1

❗ KL-0326-170 in plastic box - KL-4990-2002

Specifications

Suspension joint nut: Size (waf) 24mm + 32mm

Profile for suspension joint nut: Double hexagon

Suspension joint: T45 + T50

Profile for suspension joint: Female TX

Drive: Size (waf) 19mm+13mm

⚠ Safety instructions and regulations

- ✔ **Before using** the special tools, read and understand all safety instructions and **follow** them for **safe use**!
- ✔ Use the special tools **as intended** and **always** carry out maintenance and repair work in compliance with the regulations on occupational safety and accident prevention as well as the vehicle manufacturer's instructions!
- ✔ **Prior to each use**, check the special tools **carefully** for damage, loose parts or unauthorised modifications. **Never** use it if you notice any such deficiencies!
- ✔ **Always** wear your personal protective equipment (for example safety goggles, protective gloves, safety shoes) when working!